

Oselvar A3 stuck tubing pictures

Control lines coming out



Clamps coming out and recovered at the shakers



To be able to get the biggest nest out we have to remove the master bushing.





Top of the bird nest coming up the riser.



Pulling the nest out.



Using tuggers to get them out.



Here it comes 😊











We have to cut the control line in to smaller pieces to get it out.



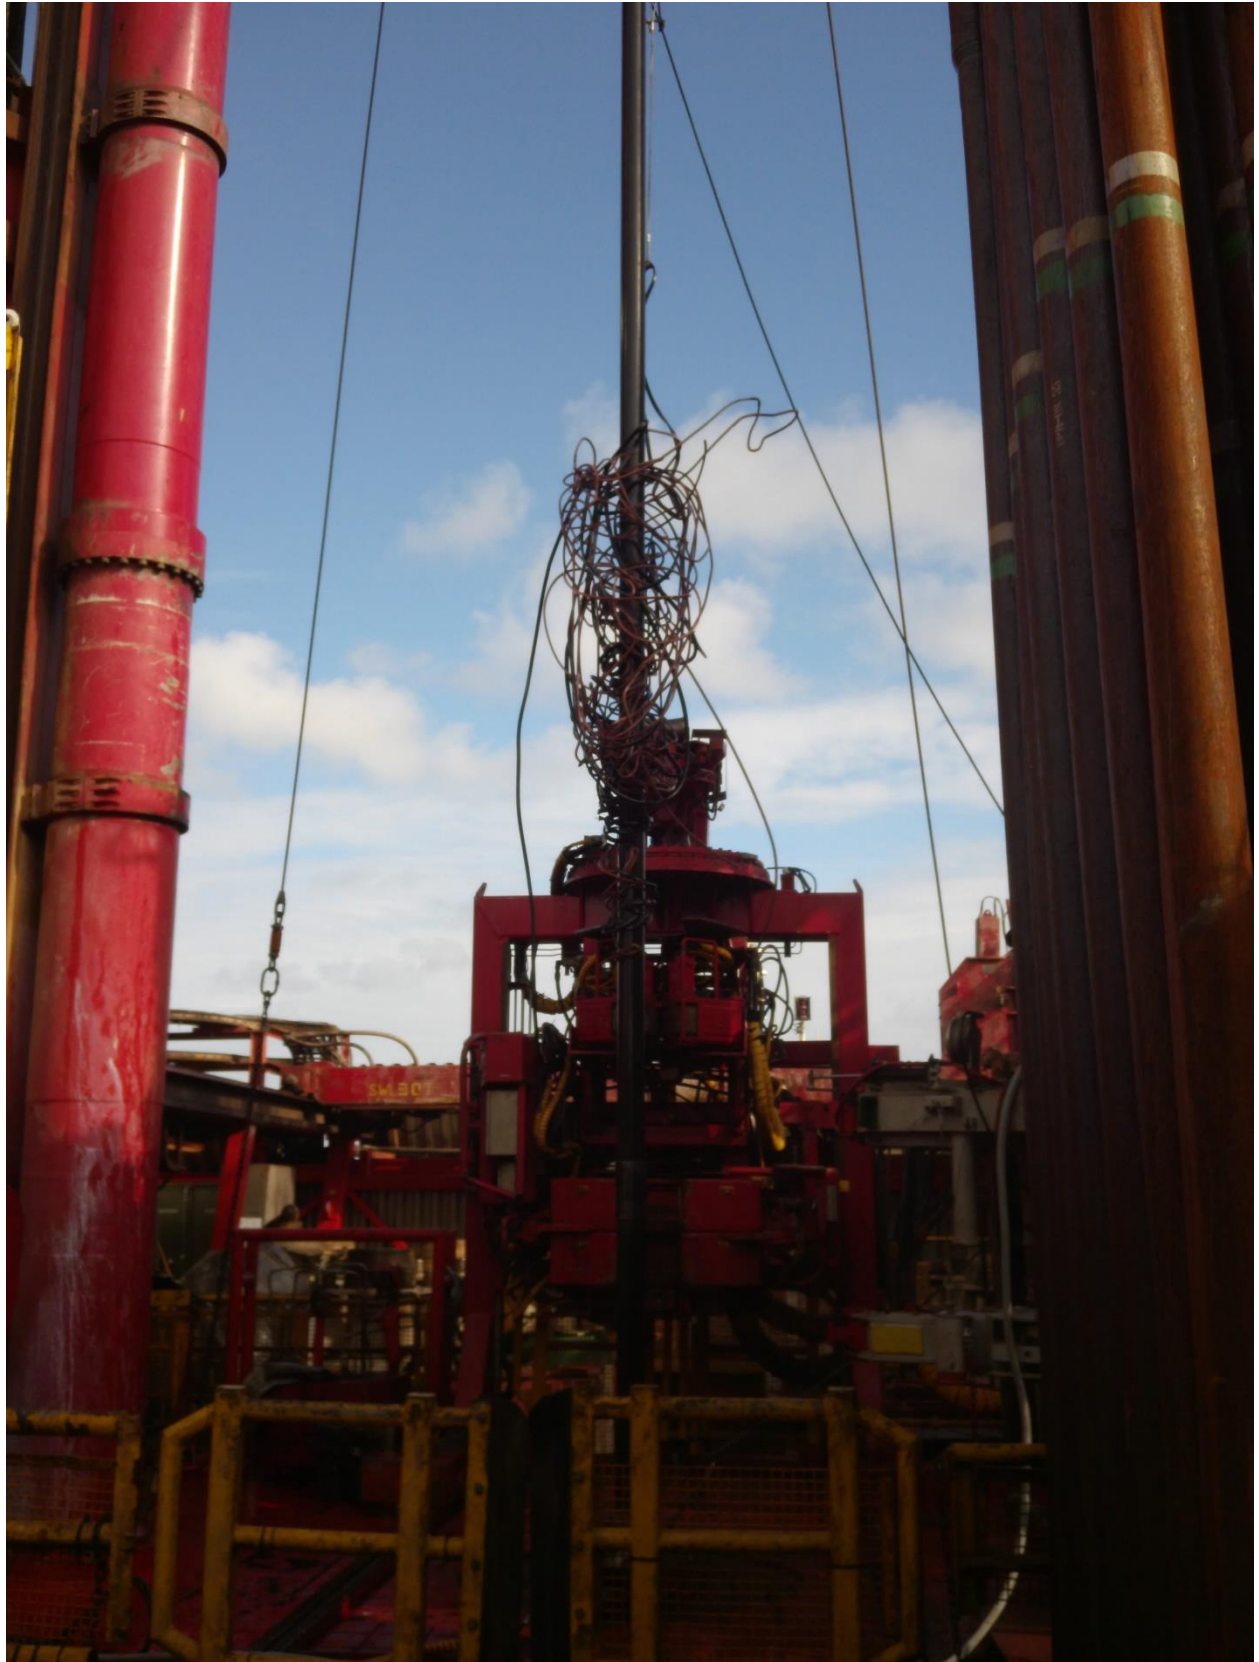



Breaking of a connection with the casing tong.

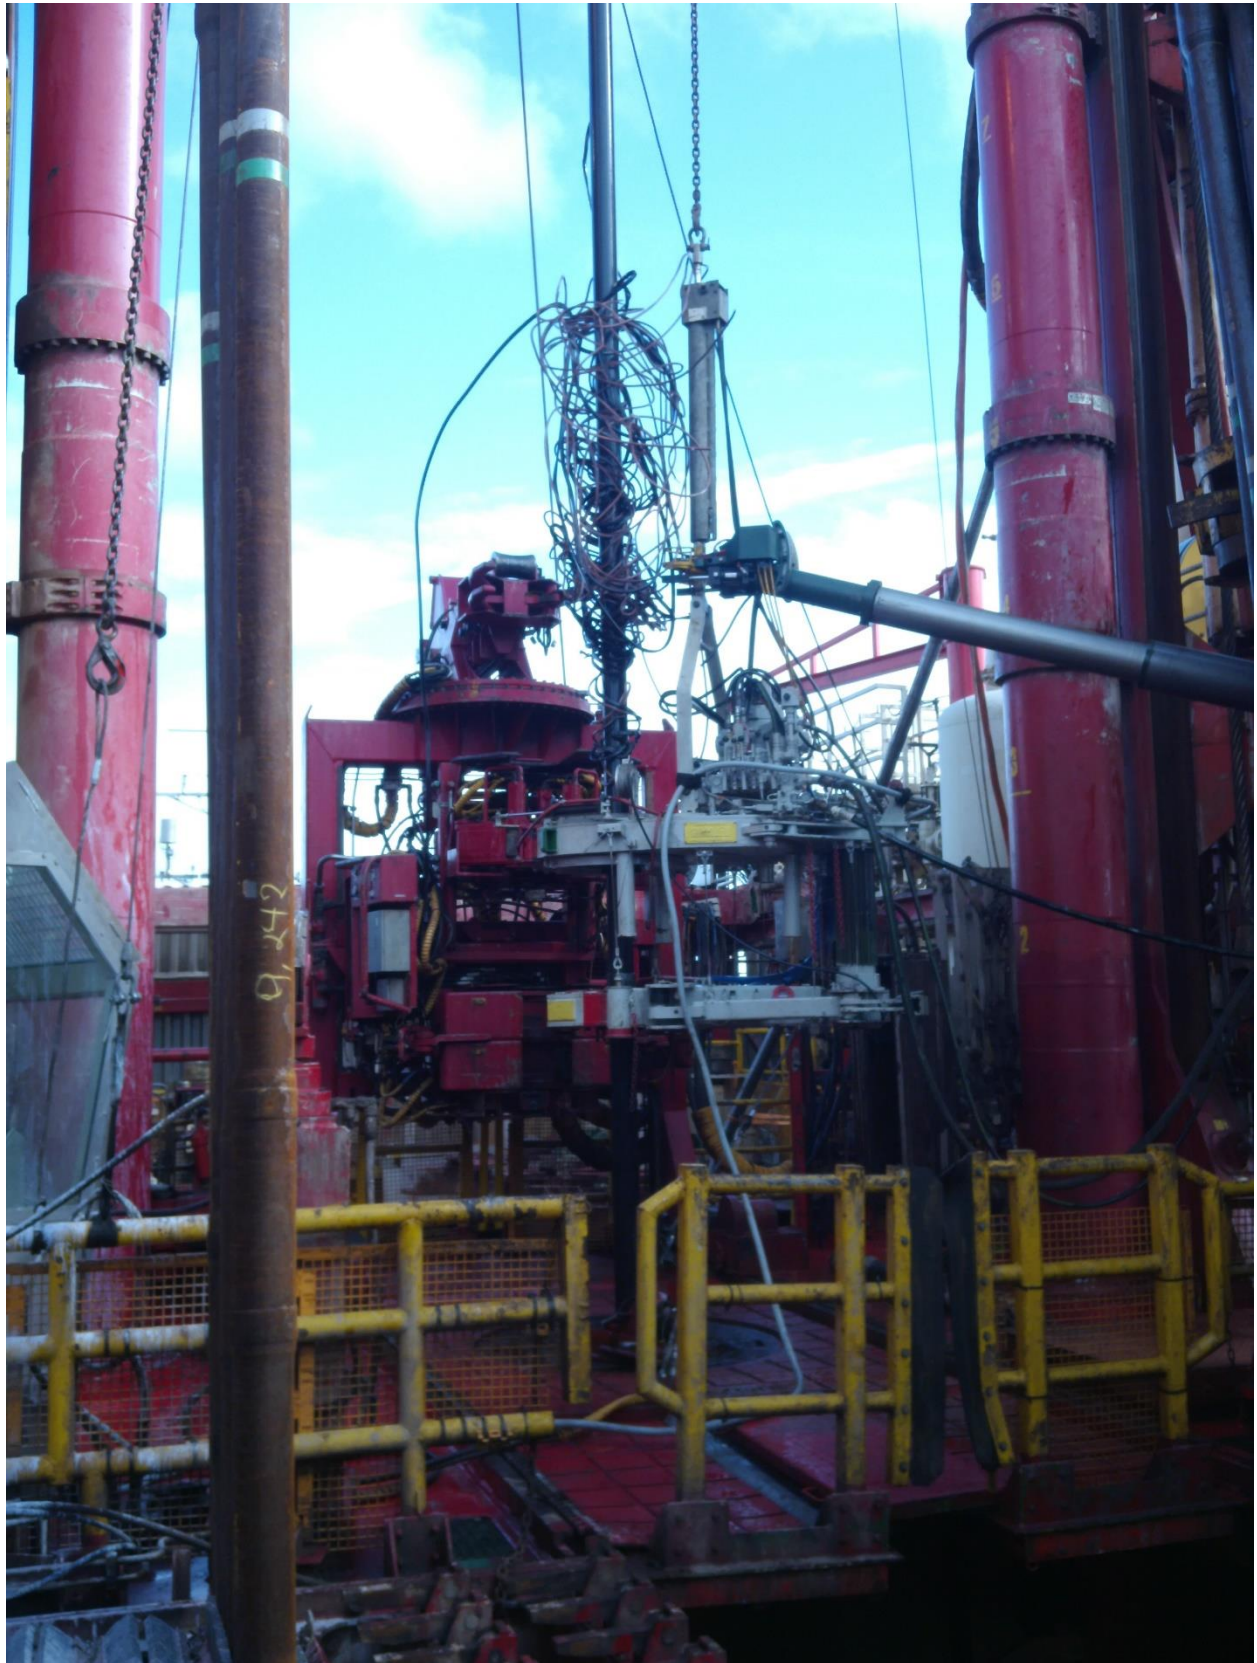

Dropping it down on deck.



Afterwards you have to get it out from the rig floor and into a skip.









New connection on surface, this time just over where we cut the tubing.



The tubing coupling just above the cut with a lot of control lines.



Mixed in with the control lines are bolts from the clamps.



The gel seen here are from the high viscous pill pumped after we had the tubing cut just below the well head.

